尺寸：55X80mm
材质：105g铜版纸，折页
备注：说明书折叠后封面在上，保修卡在下面

OPERATION INSTRUCTIONS

Please read the user manual carefully before using the product and keep it properly.

ELECTRIC SHAVERS

L2

PRECAUTIONS

1. When charging appliances, it is necessary to use an adapter with an output terminal of 5V⎓1A (measured to have a maximum output power of less than 15W) that meets the requirements of GB4706.1-2005 standard to charge the appliances.
2. Before charging, it is necessary to confirm whether there are any debris, water droplets, or other foreign objects near the plug and socket. Clean them thoroughly before inserting, otherwise it may cause fire, electric shock, or short circuit.
3. Do not place the machine in high temperature or direct sunlight during charging. After charging, please remove the charger promptly to avoid accidents caused by overcharging.
4. Do not remove the battery at will. If you want to remove the battery, the machine must be powered off.
5. When traveling, it is necessary to ensure that the protective cover of the shaver is covered to protect the shaver blade.
6. If there is any liquid leakage inside the battery, do not touch it with your hands. If it comes into contact with your eyes or skin, please wash it immediately with water and consult a doctor immediately.
7. This product can only be used as a household appliance and cannot be used for industrial purposes.
8. When replacing the blade or other accessories, please turn off the machine and unplug the power charger first.
9. Please charge in an environment between 5 ° C and 35 ° C.
10. When the blade is damaged, do not use it again to avoid danger.
11. When abnormal situations occur during charging or use of the product (such as abnormal odor, temperature, sound), the power should be immediately cut off and the use should be stopped.
12. Please place the equipment in a dry place and keep it away from moisture.
13. The equipment is not intended to be defective or lacking in physical, sensory, or mental abilities people with experience and knowledge (including children) use it, unless there is someone responsible for their safety to supervise or guide them in the use of the equipment; Children should be taken care of to ensure that they do not play with this equipment. 14. This device is not a toy, and children are prohibited from playing with it as a toy. 15. The blade head is prone to breeding a large number of bacteria, please clean and maintain it in a timely manner after use.knowledge.

Warning: Keep the equipment dry!


PACKING LIST

host	charging line	cleaning brush	instructions
1	1	1	1

SPECIFICATION PARAMETERS

Product Name	ELECTRIC SHAVERS
Product Model	L2
Charging Input	5V⎓1A
Working Voltage	3.7V⎓
Rated Input Power	5W
Battery Capacity	400mAh

PRODUCT STRUCTURE DIAGRAM

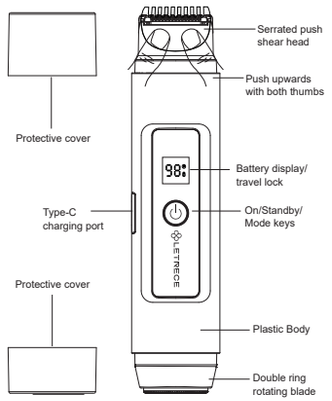

The pictures are for reference only, please refer to the actual product for details

INSTRUCTIONS

1. On/Standby/Mode button: Press this button once to turn on the machine, which defaults to shaving mode. Press this button again to switch to trimming mode, and press it again for the third time to turn off the machine, which enters standby mode; Press and hold this key for 3 seconds to enter the travel lock state, and press and hold this key again for 3 seconds to release the travel lock.
2. Gently press the fixed blade against the skin, slowly move it against the direction of hair growth, and make a straight and winding movement. After cleaning, please clean the blade head components and hair storage room in a timely manner.
3. Please shave on dry skin, so shave before or after washing the skin for a period of time. If you tighten the skin during shaving, the shaving effect will be better.
4. Display the current battery level percentage during charging, and show the percentage when fully charged.

REPLACE THE BLADE

Note: Before replacing the blade, please turn off the machine and disconnect the charging power supply!
1. Comb tooth replacement: The fixed length comb tooth head can be disassembled by turning it upwards. After replacing the new blade head, align it with the buckle position and press it back.
2. Double ring rotating blade replacement: Rotate counterclockwise to remove the double ring blade, replace with a new blade, align with the buckle, and rotate clockwise to reinstall the blade

COMMON FAULTS AND ANALYSIS

Fault phenomenon	Cause analysis	Solution
Unable to power on	The battery is out of charge	Recharge the battery before use
	Power on without pressing the on/standby/mode button	Press the power/standby/ mode button again to turn on the device
	The product has a malfunction	Contact the after-sales service department for assistance in handling
Allergies occur after shaving	Your skin needs some time to adapt to this shaver	Generally, symptoms disappear naturally after a 2-3 week probation period
Unable to charge	The charging environment temperature is too high	Charging in an environment between 5 ° C and 35 ° C
	The product has a malfunction	Contact the after-sales service department for assistance in handling
Poor shaving effect	Damaged or worn blade head	Replace the blade with a new one

CLEANING AND MAINTENANCE

1. Please shut down and unplug the charging plug before cleaning.
2. Shavers must be cleaned regularly to ensure better shaving results.
3. Rinse the shaver blade assembly with water after each use (note: remove the blade assembly before rinsing with water)
4. When using hot water for flushing, please be careful not to let the water temperature be too high to avoid burning your hands.
5. If necessary, degreasing solution (such as alcohol) can be used to assist in cleaning the shaver mesh assembly. After cleaning, use a drop of sewing machine oil to lubricate the shaver mesh to avoid wear and tear.
6. After cleaning, place the blade mesh, blade head, and comb assembly back into the head cover and install them in order.

BATTERY PROCESSING METHODS

——Before discarding the appliance, the battery must be removed from the appliance.
——When removing the battery, the appliance must be powered off.
——Batteries should be disposed of safely.
1. After removing the blade heads at both ends, unscrew the fixing screws at the comb teeth end, push out the internal battery module from one end, use auxiliary tools to pry open the battery module, and then remove the internal battery completely.
2. Do not dispose of the battery casually when removing it. Please place the battery in a dedicated recycling bin and do not mix it with other household waste to avoid polluting the environment.

WARRANTY CARD

Customer	Full name:		Warranty period A year
	Address:		
	Phone:		
	Purchasing date:		

Please fill in each column of this warranty card in detail and stamp it with the dealer's seal, otherwise it will be invalid.
1. This product is free of charge for one year from the date of purchase under normal usage conditions.
2. If replacement of spare parts is required beyond the deadline specified in the above item, maintenance fees will be charged at the discretion.
3. During the warranty period, the following situations will not be repaired free of charge:
a、 Those who fail to present their warranty card or purchase voucher (invoice or receipt).
b、 Repairs beyond the warranty period.
c、 Damage caused by disassembly or modification.
d、 Damage caused by incorrect/negligent use or improper human use.
e、 Malfunctions or damages caused by non ordinary household use (such as prolonged use in harsh environments).
f、 The appearance naturally stains due to use.

Dealer signature